

# Quick Start: Install Guardian Visibility System

## Your Kit Includes:

- |                                  |                       |
|----------------------------------|-----------------------|
| (1) Tive Solo 5G Tracker         | (1) Cleaning Rag      |
| (1) Tive Temperature Beacon      | (2) Cleaning Swabs    |
| (1) Tive Wiring Harness          | Zip Ties & Wire Clips |
| (2) Guardian Visibility Placards | Extra Harness Wire    |
| (1) Packet of Dielectric Grease  | Connectors & Tape     |

## You will also need:


- Socket wrench  
Step Ladder  
Optional: Dowel Rod  
Optional: Pliers or wire cutters

## Step 1: Check Reefer Battery Location & Drain Hole

1. Open the reefer cowling at the front of the trailer.
2. Find which side the reefer battery is on.
3. Look for a drain hole on the same side at the bottom front of the trailer.
  - o If there is a drain hole, move to Step 2.
  - o If no drain hole, stop and call us for further instructions.

## Step 2: Activate your Tive Solo 5G

1. Check the barcode on the Tive Solo 5G matches the barcode on the Guardian Visibility placards.
2. Press "Start" on the Tive Solo 5G until the blue light appears

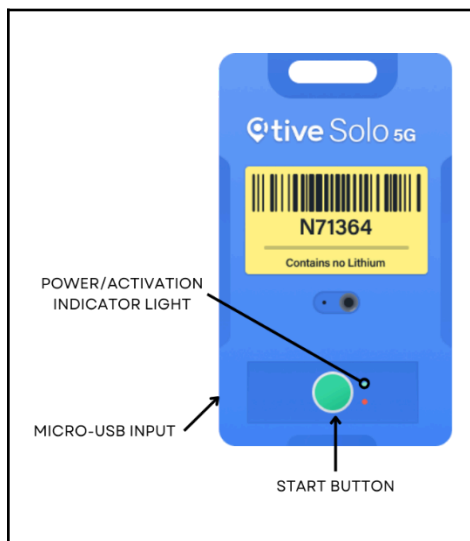


Scan this QR Code on your phone to watch a quick video showing a complete install of this kit.



Scan me!

## Step 3: Activate your Temperature Beacon

1. Press "Check" on the Tive Temperature Beacon until the blue indicator light appears

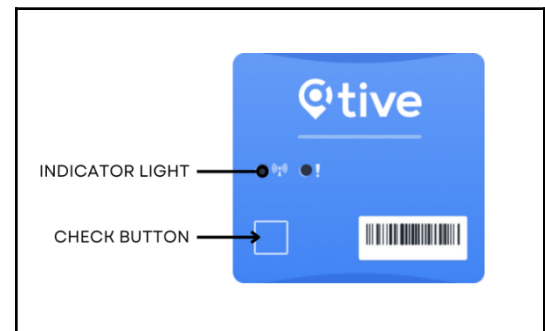


## Step 4: Prepare the Installation Area

1. Inside the trailer, go to the front near the reefer head on the same side as the battery.
2. Ensure the drain hole is clear of debris.
3. Clean a spot 3 feet off the deck on the front wall next to the reefer frame.
4. Let the area dry before continuing.

## Step 5: Install the Tive Solo 5G

1. Remove the adhesive backing from the Solo 5G.
2. Attach it to the cleaned spot.

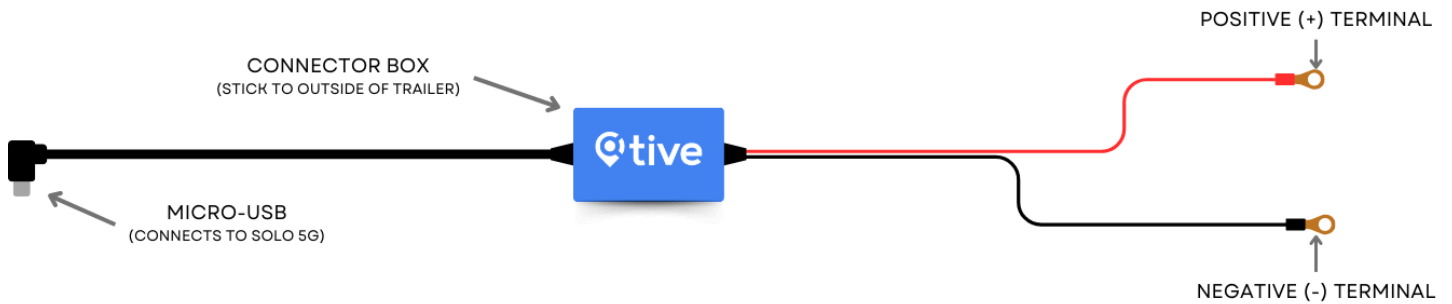

### Step 6: Install the Wiring Harness

1. Exit the trailer and go to the reefer unit.
2. Find the small connector box in the middle of the harness.
3. Feed the solid black wire with the Micro-USB connector up through the drain hole.
4. Clean and dry a spot under the reefer unit and a strip running down to the bottom edge of the trailer.
5. Stick the connector box to the side of the trailer with the solid black wire facing down

### Step 7: Connect to the Reefer Battery

1. Feed the red/black wire up through the cowl to reach the battery.
2. Connect the red wire to the battery's POS (+) terminal.
3. Connect the black wire to the battery's NEG (-) terminal.

### Step 8: Connect the Solo 5G

1. Inside the trailer, open the charging port on the Solo 5G.
2. Apply a small amount of dielectric grease to the charging port.
3. Plug the Micro-USB connector end of the harness into the Solo 5G.
4. Secure any extra wire using zip ties and wire tie-downs.

### Step 9: Install the Tive Beacon

1. Move to the rear of the trailer by the doors.

2. Clean a spot on the roof between the doors.
3. Peel the adhesive backing off the Beacon and press it firmly onto the cleaned spot.
  - o You may need a step ladder.

### Step 10: Install the Interior Placard

1. Inside the trailer, move to the right wall, adjacent to the rear doors.
2. Clean an area large enough for the placard.
3. Peel off the adhesive backing and press the placard firmly in place.




### Step 11: Install the Exterior Placard

1. Exit the trailer and close the doors.
2. Find a suitable spot on the rear left door.
3. Clean the area, peel the backing, and press the placard firmly in place.

### Step 12: Submit your trailer & device information to setup your account:

1. Fill out the Guardian Visibility Carrier Setup form at GuardianViz.com (paper copy included for reference)

All Done!  Your Guardian Visibility system is now installed and ready to go!